


Insert Part Number		3520-2.20X2.0DP
Insert Thread Form		Metric Coarse
Nominal Thread Size		M2.2 X 0.45
Insert Length Q (installed)	D	2.0D
Insert Length Q (installed)	mm	4.40
Insert Material		304 Stainless Steel
Insert Coating/Plating		-
Military Standard	#	
National Aerospace Standard	#	
Federal Stock	#	
National Stock / NATO	#	

Optimum thread performance with Wire Thread Inserts is achieved when the inserts are installed 1/2 to 1 pitch below the surface of the tapped hole. This means that the actual length of an installed insert is equal to dimension Q less 1/2 to 1 pitch. Dimensions S and T allow for tap end clearance of intermediate taps. When using Bottoming and Spiral Flute Taps these dimensions maybe reduced by an amount equal to 2 thread pitches. Any countersink depths must be added to these dimensions.


COMPATIBLE POWERCOIL INSTALLATION AND REMOVAL TOOLS		
TOOL TYPE	Part #	
Hand Installation Tool	3500-HIT2	
Tang Break Tool	3500-TB2	
Removal Tool	3500-RT1	
Machine Installation Tool	3520-2.20MIT	
Mandrel Installation Tool	-	
Captive Prewinder Tool	3520-2.20HIP	
Non-Captive Prewinder Tool	-	
Spring Loaded tang Break Tool	3500-STB1	
Pneumatic Front end assembly (FEA)	3520-2.20MIP	
FEA Mandrel	3520-2.20MIPM	
FEA Nozzle	3520-2.20MIPN	
Pneumatic Tool	3500-MIP1	

powercoil.com.au


PowerCoil is a registered trademark of Bordo International Ptv Ltd Australia

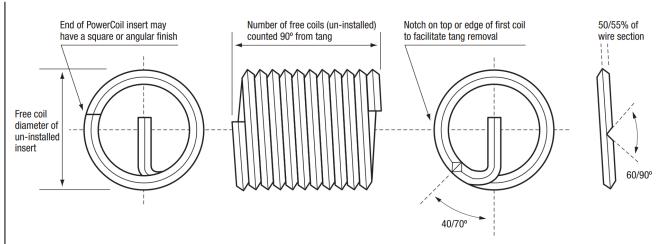


DRILLED HOLE DIMENSIONS INTERMEDIATE/PLUG TAP				
mm	2.30			
	2007-2.30			
inch	#42			
	2013-42			
mm	2.297			
mm	2.397			
mm	6.43			
	inch mm mm			

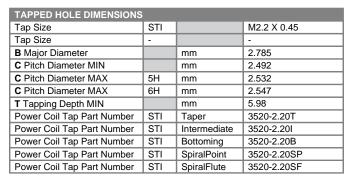

INSERT SPECIFICATIONS			
E Fitted Minor Diameter	mm	1.713	
Q Nominal Length Installed	mm	4.40	
Free Coil Diameter minimum	mm	2.76	
Free Coil Diameter maximum	mm	3.00	
Free Coils minimum	#	7.10	
Free Coils maximum	#	7.90	

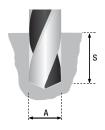

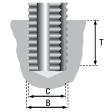

IMPORTANT The success of any drilling and tapping operation is dependant upon many factors -type of material being cut, cutting speed, coolant, equipment being used - and it is not possible to give specific drill sizes for each material. Drill sizes shown are recommendations only and PowerCoil would strongly suggest that independent testing be performed for specific and critical applications. When using wire thread inserts it is important that the drilling and tapping diameters and lengths shown are adhered to.

The figures outlined in these tables encompass effective free coil tolerances for most globally recognized standards and manufacturers, including those of reduced diameter wire thread inserts.

Number of Free Coils – the number of coils on an un-installed insert counted along the insert length 90° from the tang.

